HOME
DECORATORS
COLLECTION

BF-24898 MSL STORAGE CHEST 50"W×19"H×21"D

INV#10365

ASSEMBLY INSTRUCTIONS

Made In China

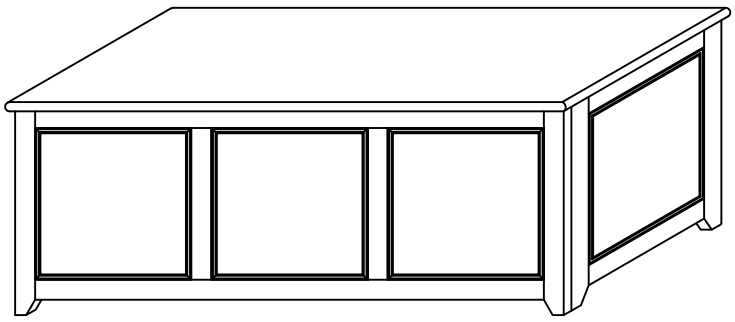

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware and then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.
IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A  TOP PANEL-1PC	B  LEFT SIDE PANEL-1PC	C  RIGHT SIDE PANEL-1PC
D  BOTTOM PANEL-1PC	E 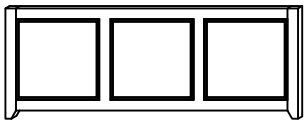 FRONT PANEL-1PC	F  BACK PANEL-1PC
G  PANELS-2PCS	H  STAND PANELS-2PCS	I  RIGHT PANEL-1PC
J 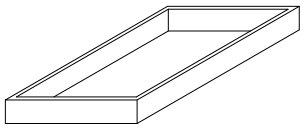 SALVER-1PC	K 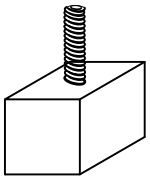 FOOT-1PC	L 8mm×1"  SCREWS-12PCS

M 6mm×3/4" SCREWS-18PCS	N  HINGES-3PCS	O  LEFT HARDWARE-1PC
Q 6mm×3/4" SCREWS-8PCS	R  CAM-BOLTS-32PCS	S CAM-LOCKS-32PCS
T  RIGHT HARDWARE-1PC	U CAM-TOOL-1PC	I1  LEFT PANEL-1PC

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO THE FINISH DURING SHIPMENT IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY. PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

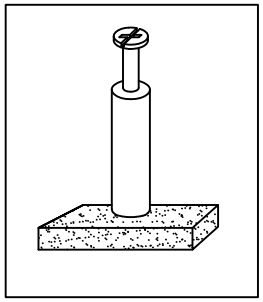

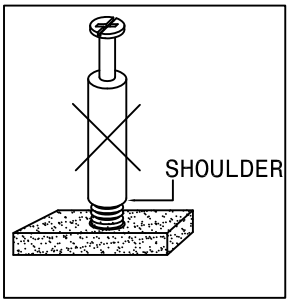

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

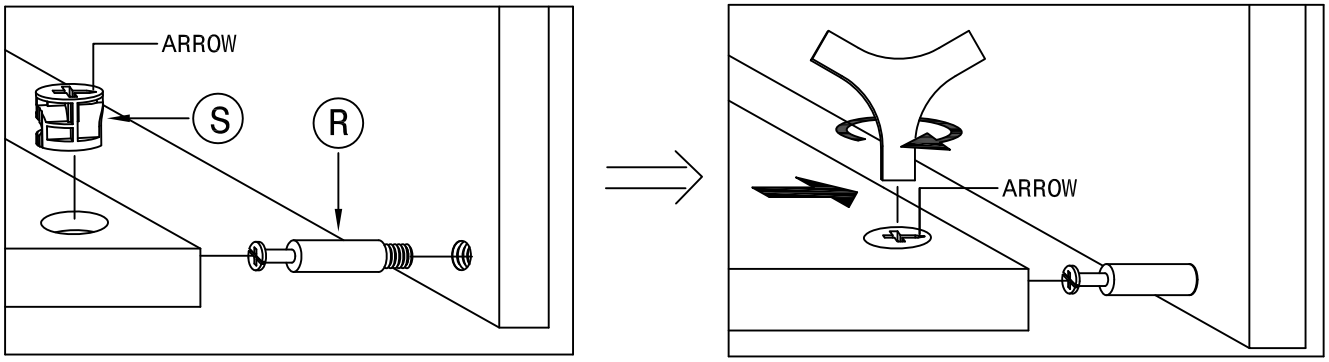

NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

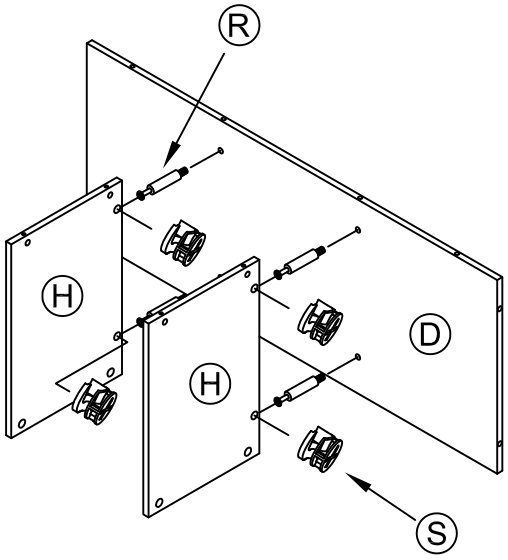

1). ASSEMBLE THE STAND PANEL(H).

- ROTATE THE 4 CAM-BOLTS(R) INTO THE HOLES IN THE BOTTOM PANEL(D).
- PLACE CAM-BOLTS(R) INTO THE HOLES IN THE STAND PANELS(H) AND ATTACH USING 4 CAM-LOCKS(S).

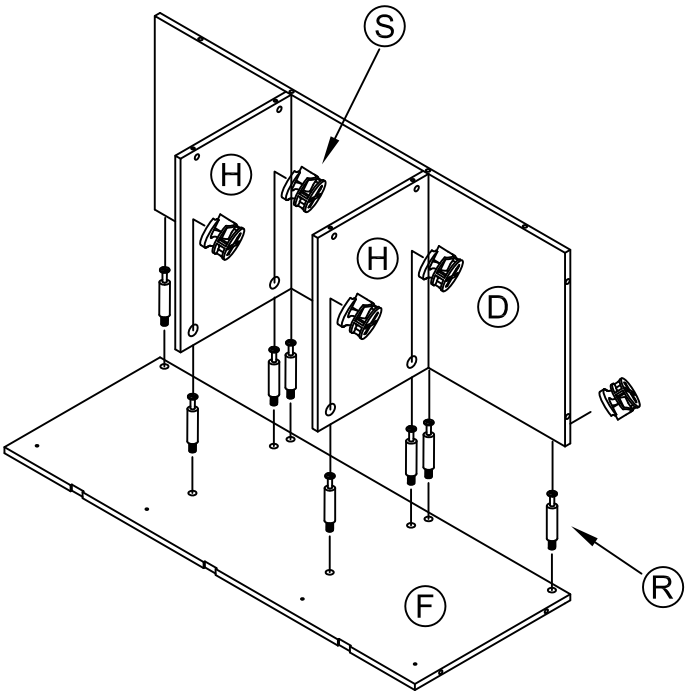

2). ASSEMBLE THE BACK PANEL(F).

- ROTATE THE 8 CAM-BOLTS(R) INTO THE HOLES IN THE BACK PANEL(F).
- PLACE CAM-BOLTS(R) INTO THE HOLES IN THE PANELS(H/D) AND ATTACH USING 8 CAM-LOCKS(S).

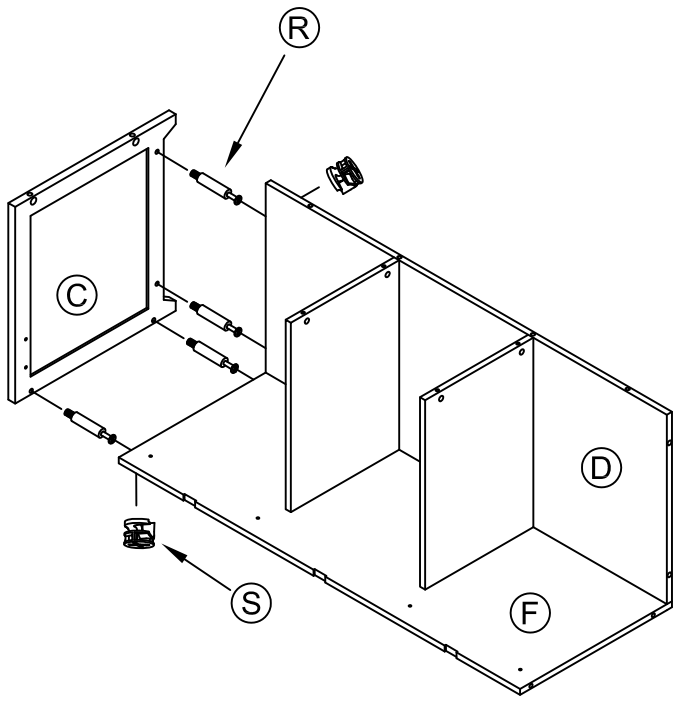

3). ASSEMBLE THE RIGHT SIDE PANEL(C).

- ROTATE THE 4 CAM-BOLTS(R) INTO THE HOLES IN THE RIGHT SIDE PANEL(C).
- PLACE CAM-BOLTS(R) INTO THE HOLES IN THE PANEL(D/F) AND ATTACH USING 4 CAM-LOCKS(S).

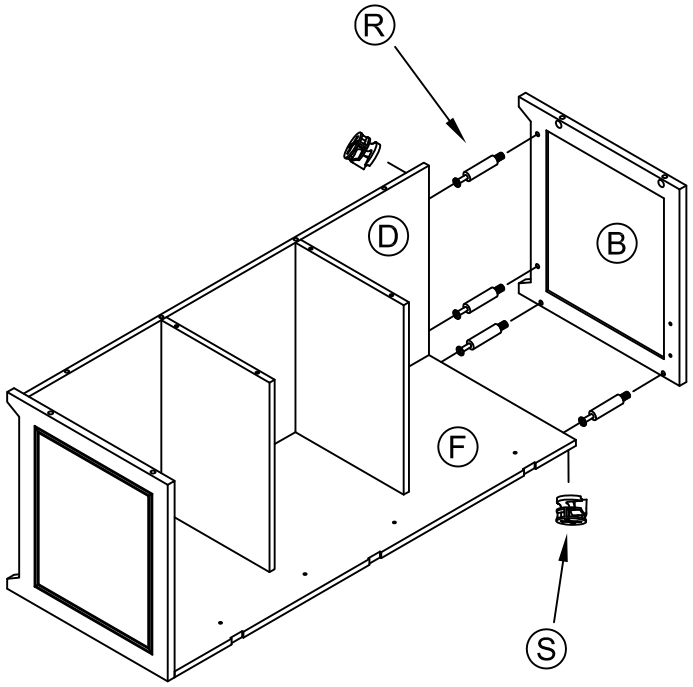

4). ASSEMBLE THE LEFT SIDE PANEL(B).

- ROTATE THE 4 CAM-BOLTS(R) INTO THE HOLES IN THE LEFT SIDE PANEL(B).
- PLACE CAM-BOLTS(R) INTO THE HOLES IN THE PANEL(D/F) AND ATTACH USING 4 CAM-LOCKS(S).

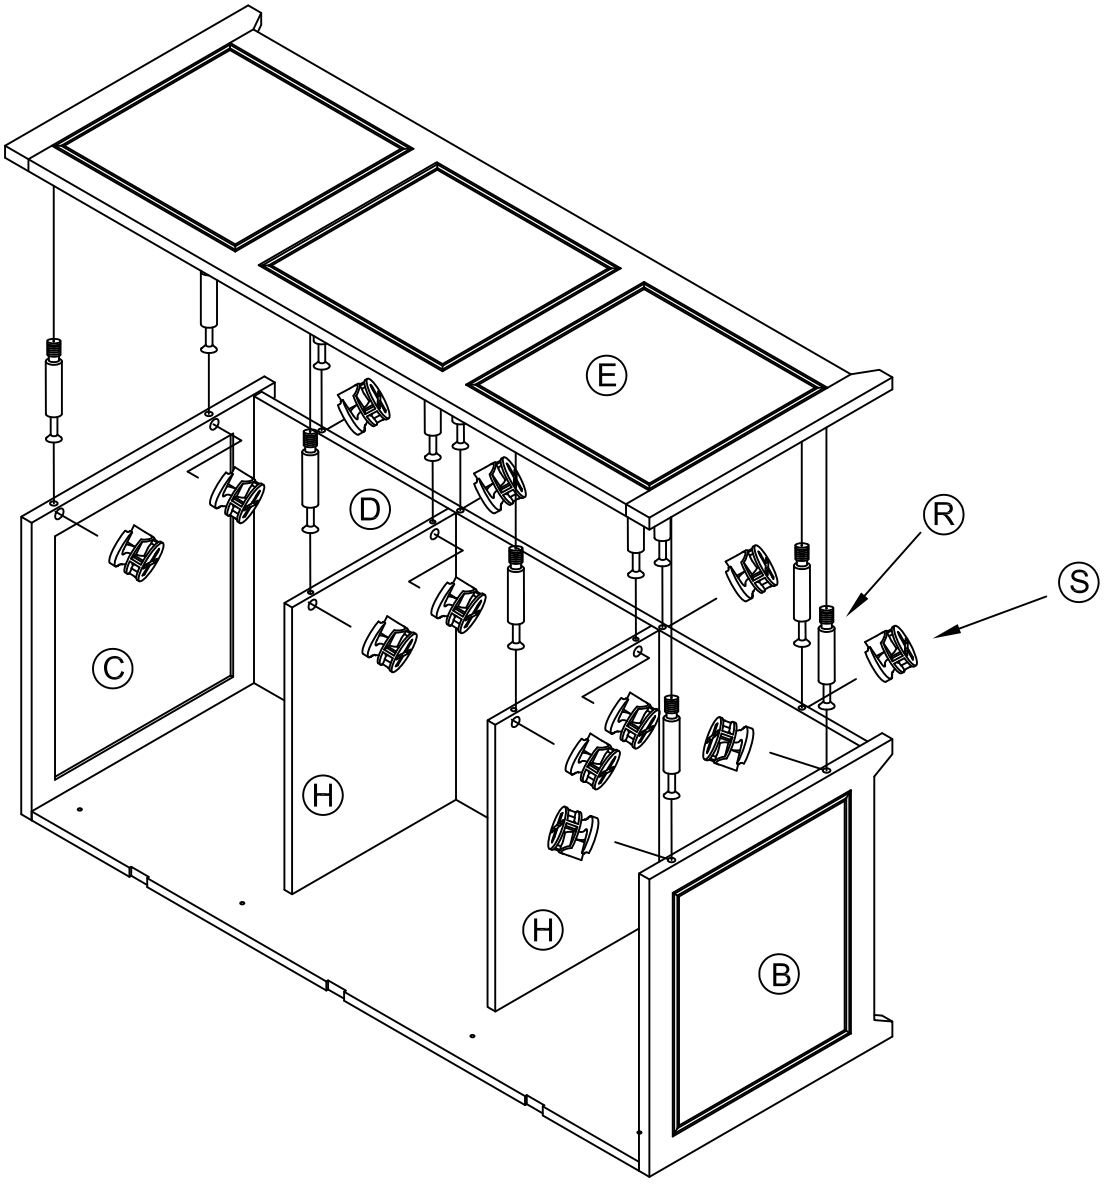

5). ASSEMBLE THE FRONT PANEL(E).

- ROTATE THE 12 CAM-BOLTS(R) INTO THE HOLES IN THE FRONT PANEL(E).
- PLACE CAM-BOLTS(R) INTO THE HOLES IN THE PANEL(B/C/D/H) AND ATTACH USING 12 CAM-LOCKS(S).

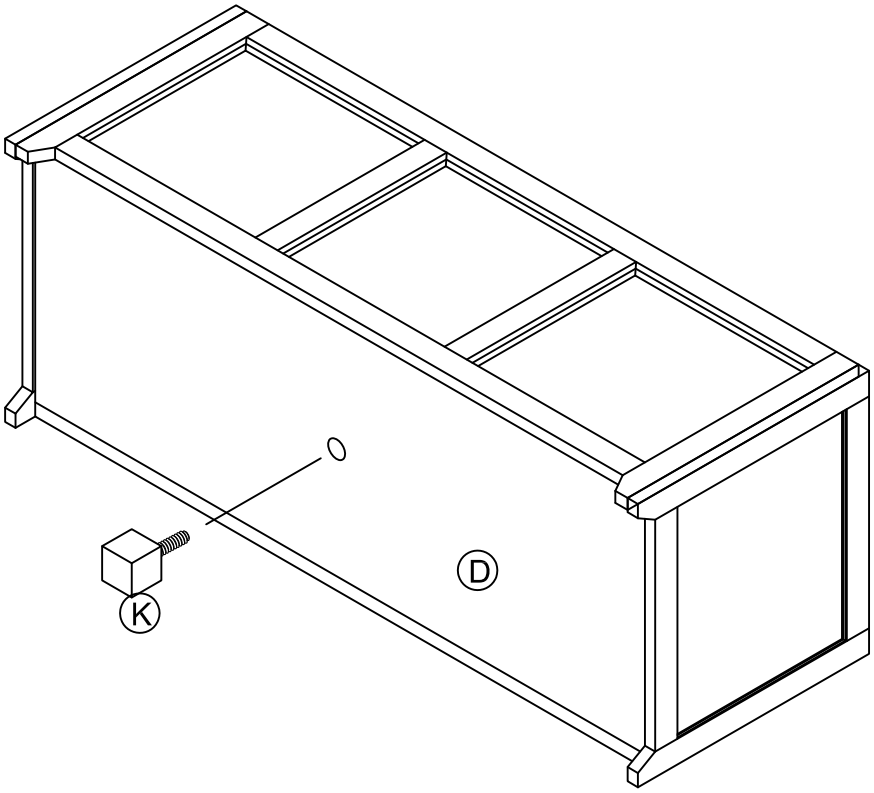

6). ASSEMBLE THE FOOT(K).

● ROTATE THE FOOT INTO THE HOLE IN THE BOTTOM PANEL(D).

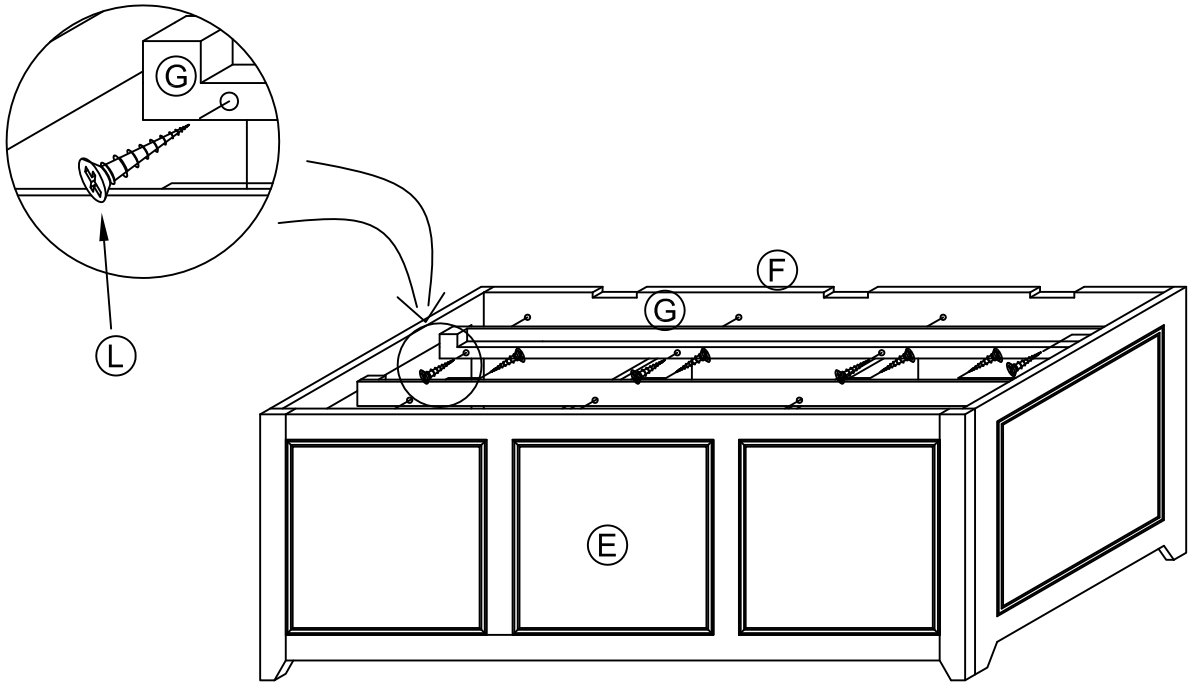

7). ASSEMBLE THE PANEL(G).

- ATTACH THE PANELS(G) TO PANEL(E/F) USING 8 SCREWS(L).

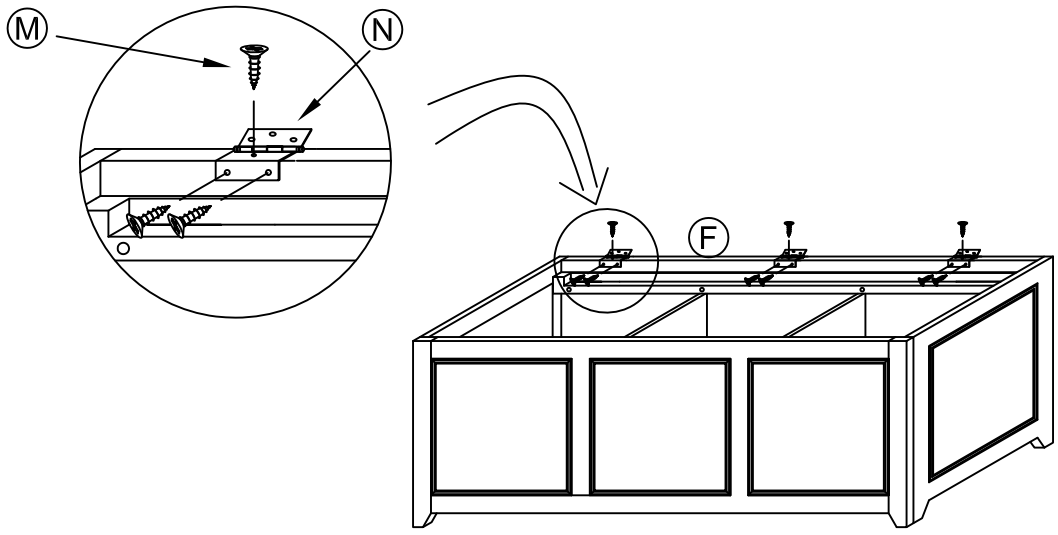

8). ASSEMBLE THE HINGES(N).

- ATTACH THE 3 HINGES(N) TO BACK PANEL(F) USING 9 SCREWS(M).

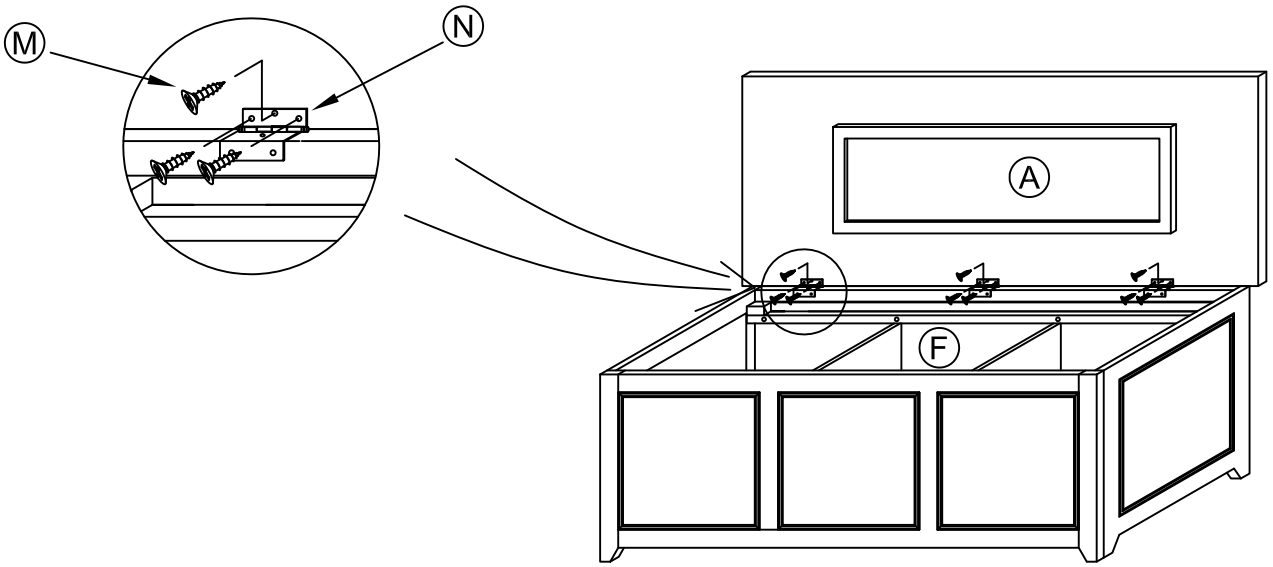

9). ASSEMBLE THE TOP PANEL(A).

- ATTACH THE TOP PANEL(A) TO HINGES(N) USING 9 SCREWS(M).

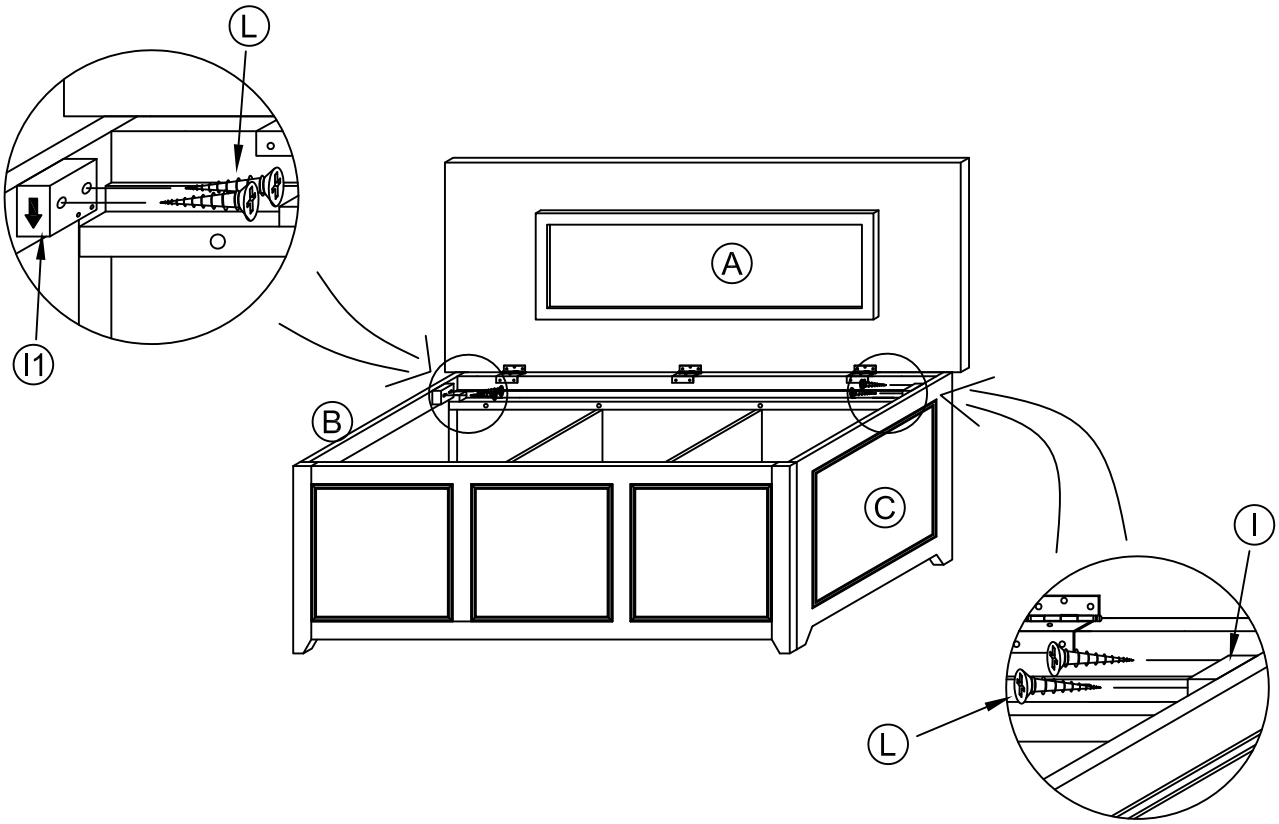

10). ASSEMBLE THE PANELS(I/I1).

- ATTACH THE PANELS(I/I1) TO PANEL(B/C) USING 4 SCREWS(L).

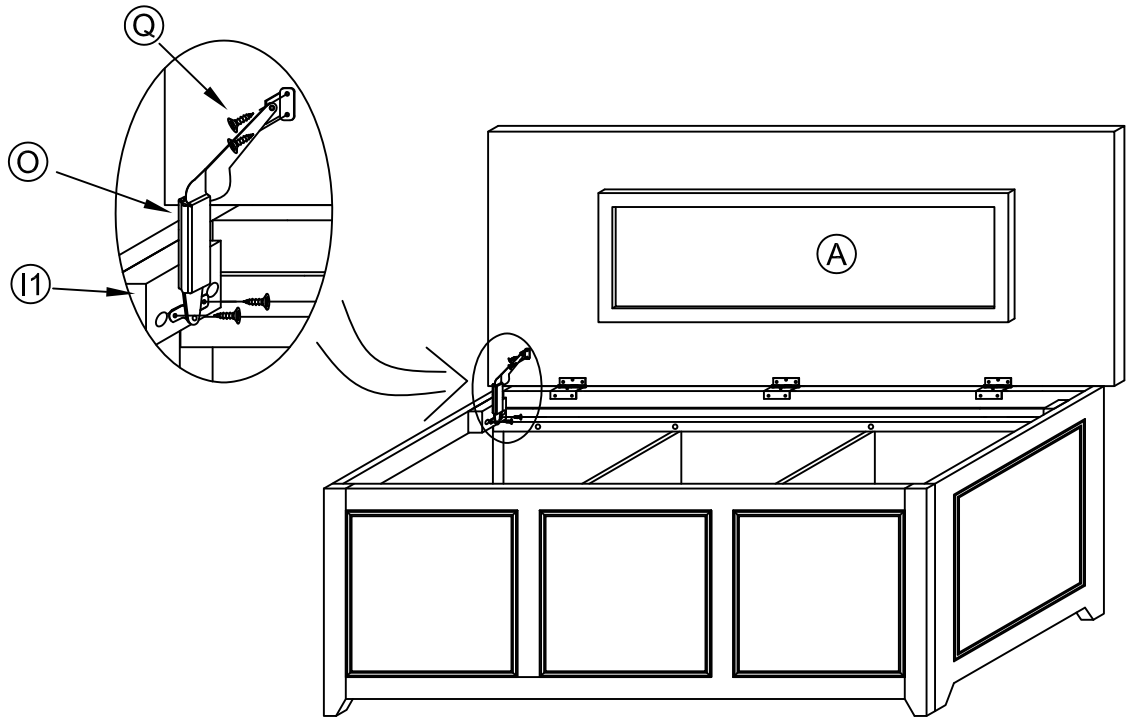

11). ASSEMBLE THE LEFT HARDWARE(O).

- ATTACH THE LEFT HARDWARE(O) TO PANEL(A/I1) USING 4 SCREWS(Q).

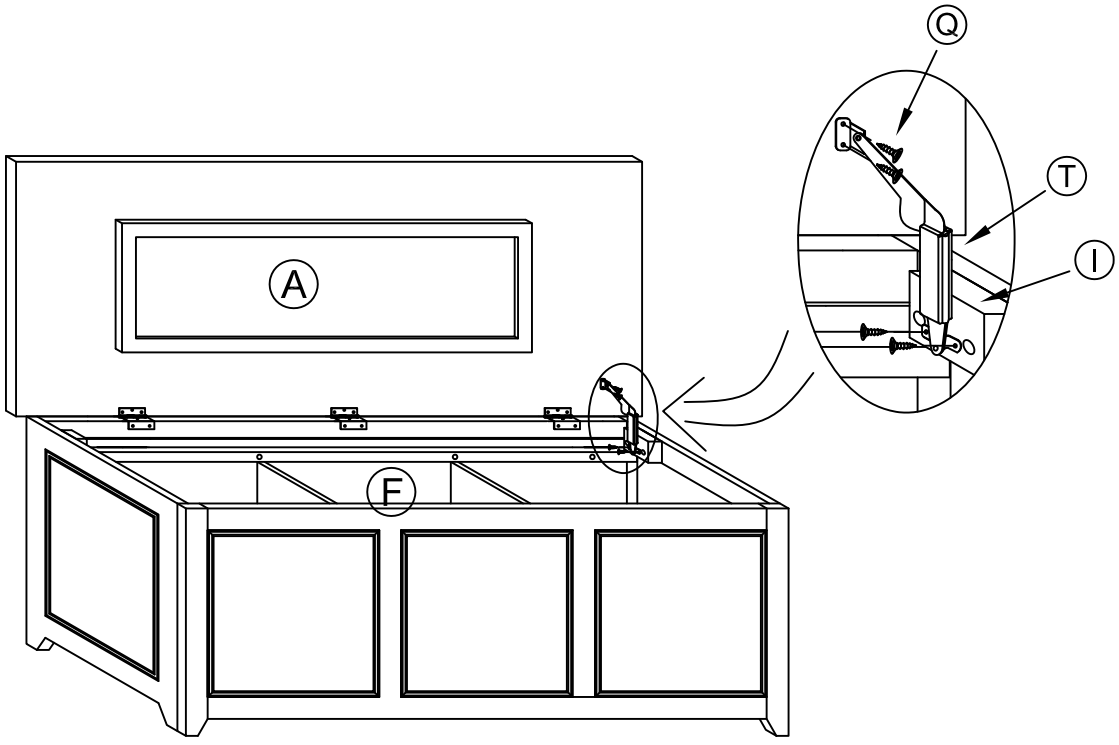

12). ASSEMBLE THE RIGHT HARDWARE(T).

- ATTACH THE RIGHT HARDWARE(T) TO PANEL(A/I) USING 4 SCREWS(Q).

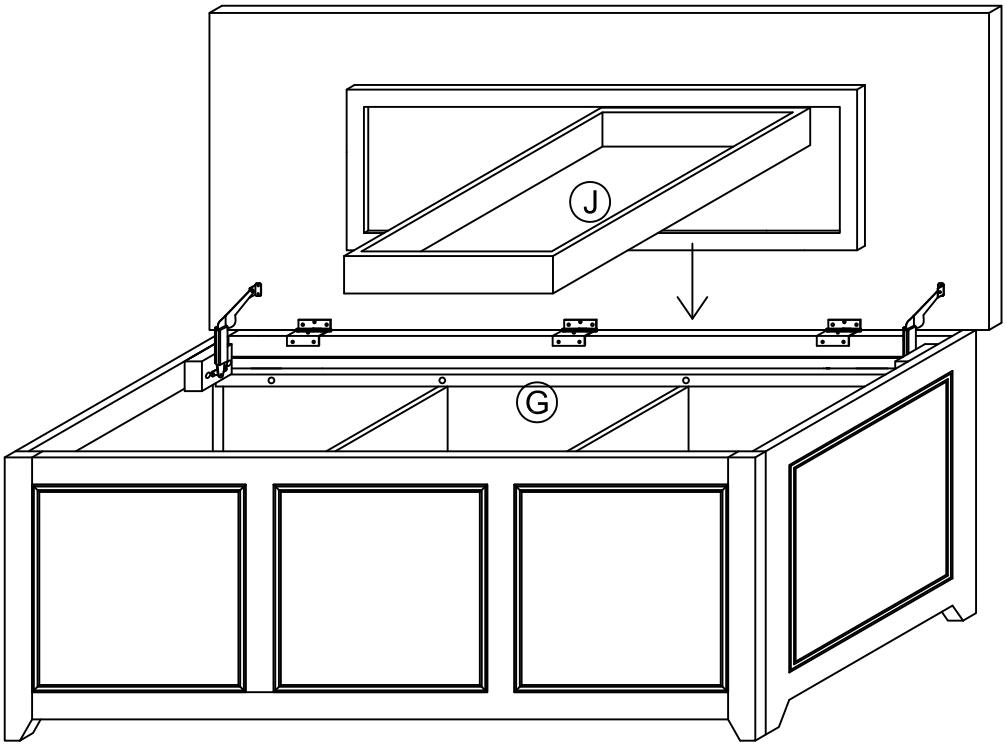

13). ASSEMBLE THE SALVER(J).

- PUT THE SALVER(J) ONTO THE PANELS(G).